


Installation and operation instructions for Auto-cleaning solar street light


- 1. Please check this manual before installation to use this product more quickly and correctly.
- 2. This product is a modular product. Lamp body lighting and photovoltaic cleaning are two different systems that do not interfere with each other.
- 3. The special position in the lamp body of this product must be equipped with 4 special induction magnets to ensure normal operation.
- 4. This product must be in the correct direction, and there must be a dedicated blank space on the photovoltaic panel for docking the cleaning machine.
- 5. Before installing and using this product, ensure that the lamp body and the cleaning machine are completely intact and not damaged from the outside.
- 6. The cleaning machine should be turned off before use, so as to ensure that the switch can work directly after installation.
- 7. When pushing the cleaning machine into the light body track, it must be applied evenly and in parallel. Unilateral violent installation is strictly prohibited.
- 8. If there is any problem during installation, please contact professional technicians before normal operation.
- 9. When pressing the cleaner switch does not work.
- Case 1: The battery is out of power, and it will automatically work and run after charging in the sun, and the built-in program will be executed;
- Case 2: The light-controlled starting voltage is not met. At this time, the photovoltaic panel of the cleaner will automatically work after tens of seconds.
- 10. The lighting of the lamp body runs independently. After the switch is turned on, the built-in intelligent mode is automatically activated to work.

Working principle diagram of cleaning photovoltaic modules

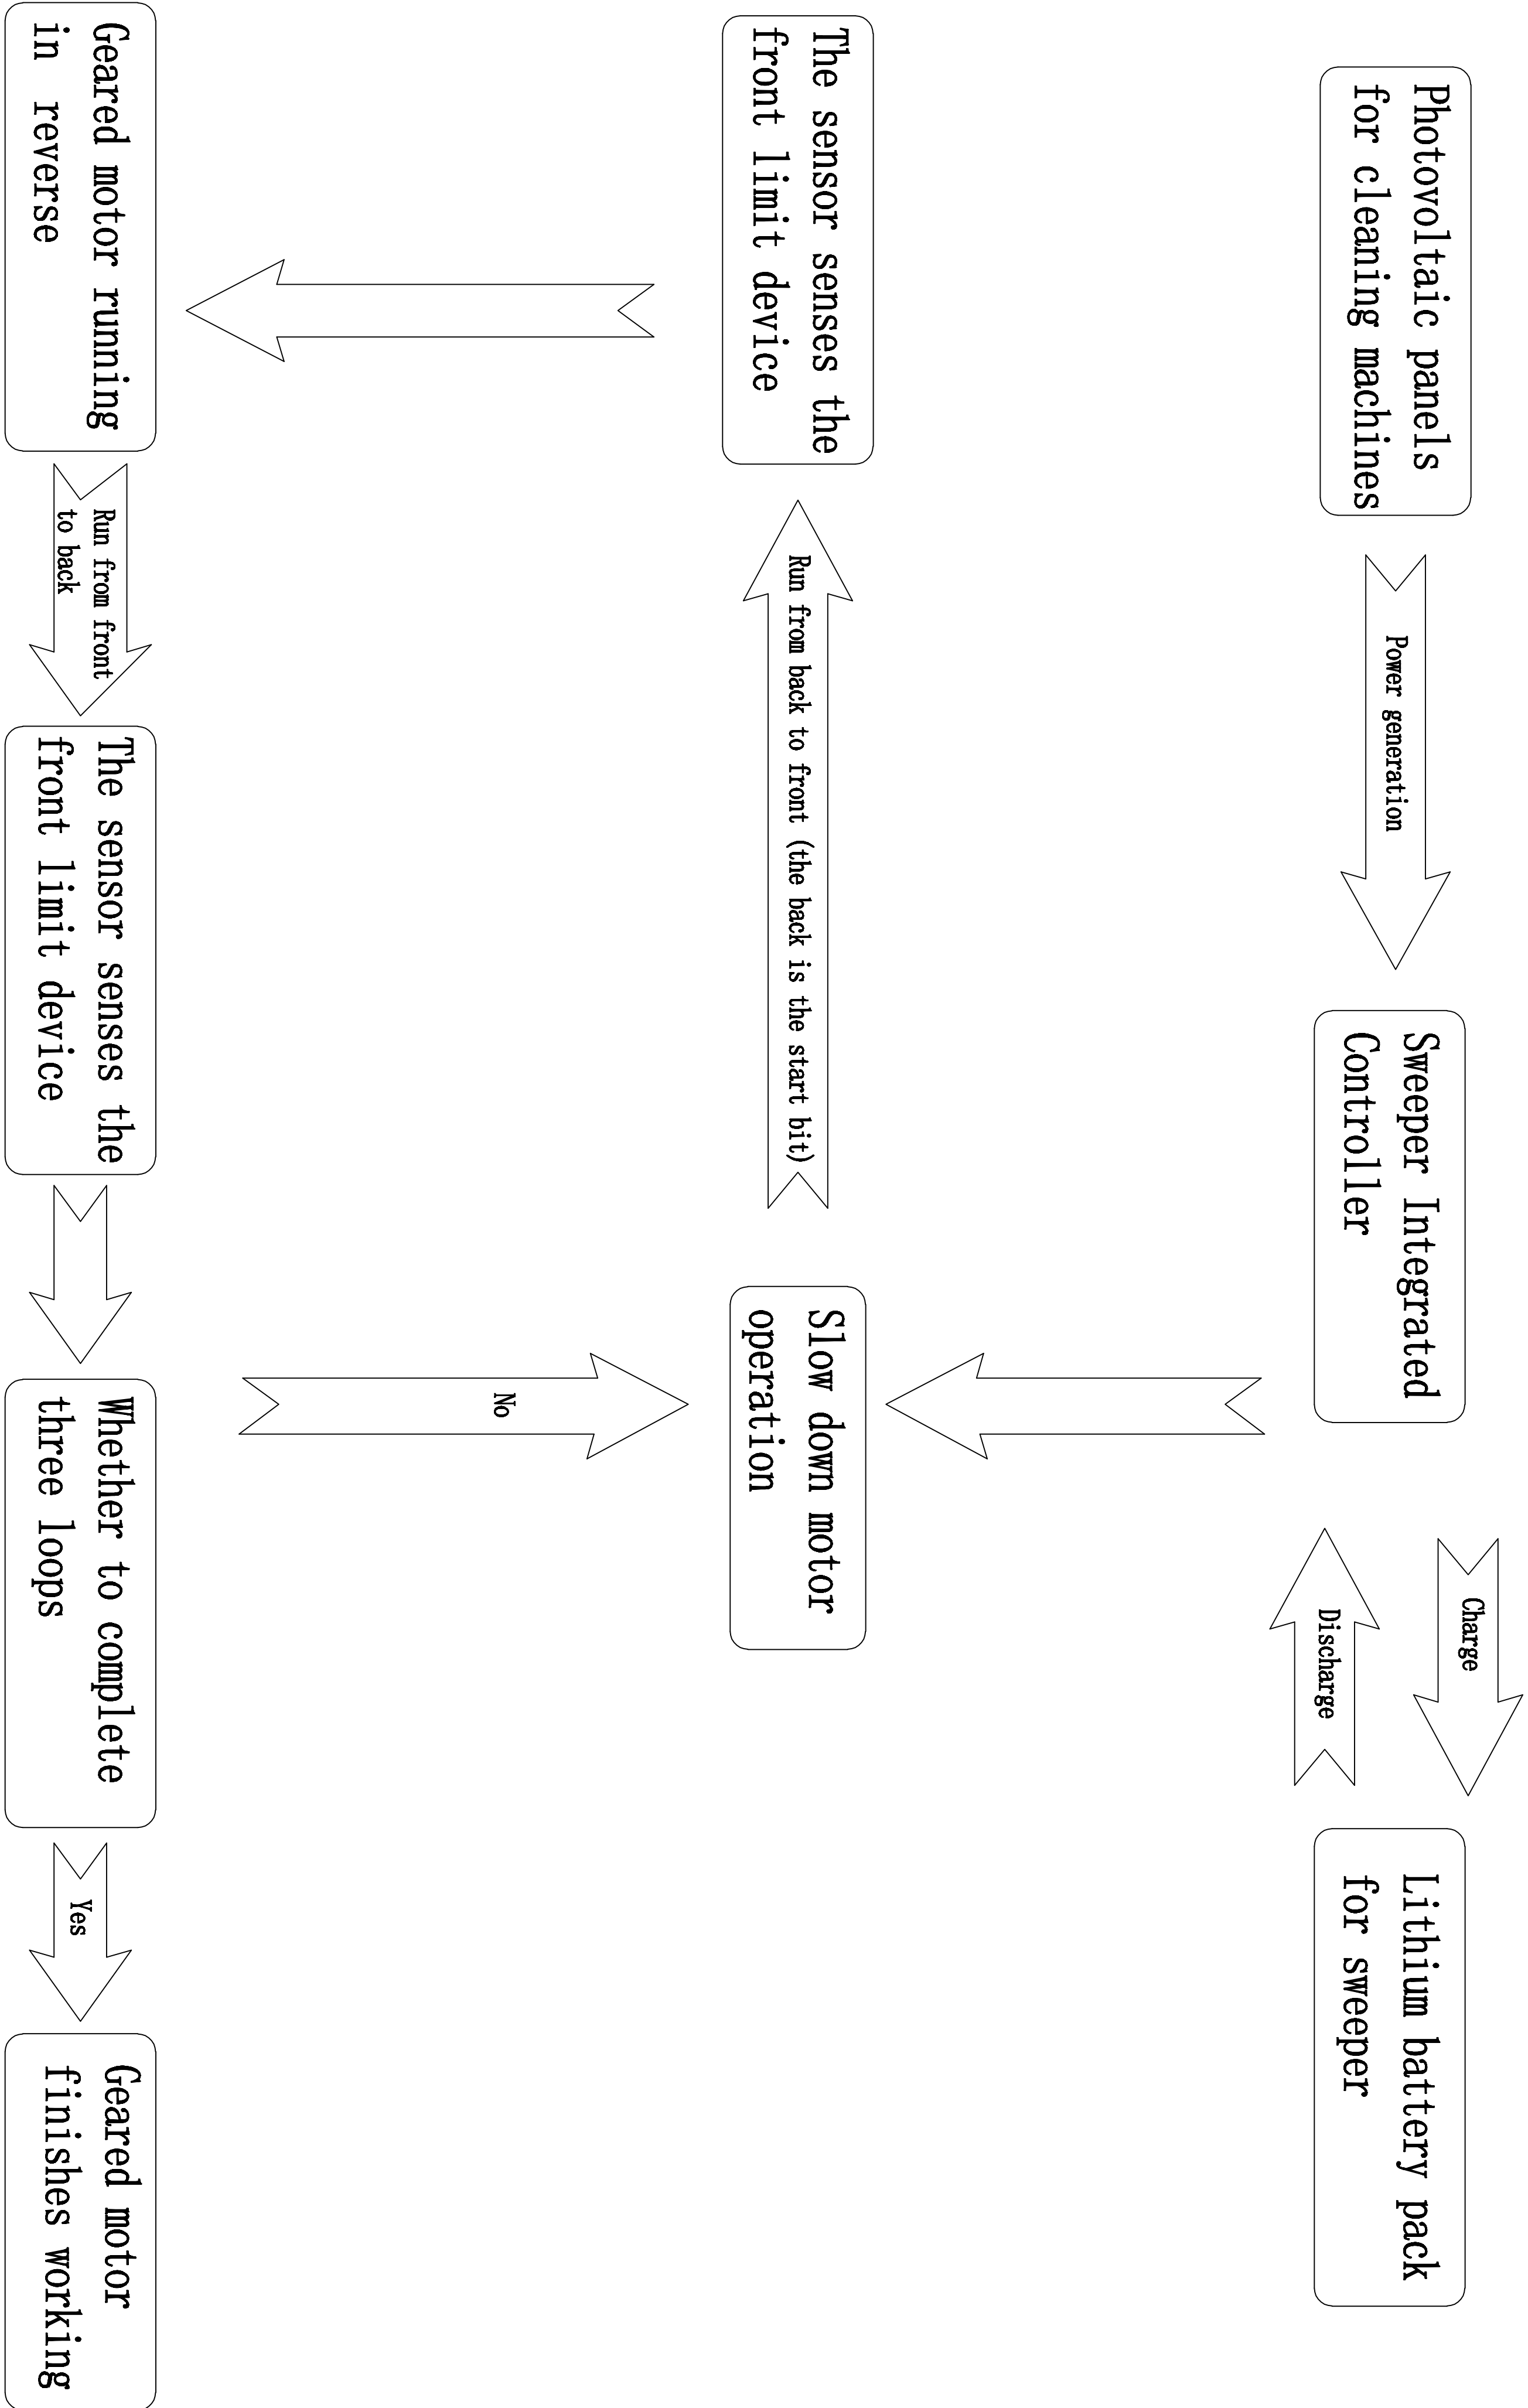


Note:
The cleaning cycle is three times a day, and each time is set to 3 cycles. It starts the work automatically by sensing the charging voltage of the solar panel and time control, then returns to the starting position after the work is completed. (The first time: when the voltage of the photovoltaic panel reaches 5V, the cleaning function is activated; the second time: the time control is 4 hours after the first time; the third time: the sunlight drops to the 5V of the photovoltaic panel to start the cleaning function).

Instructions for installation steps

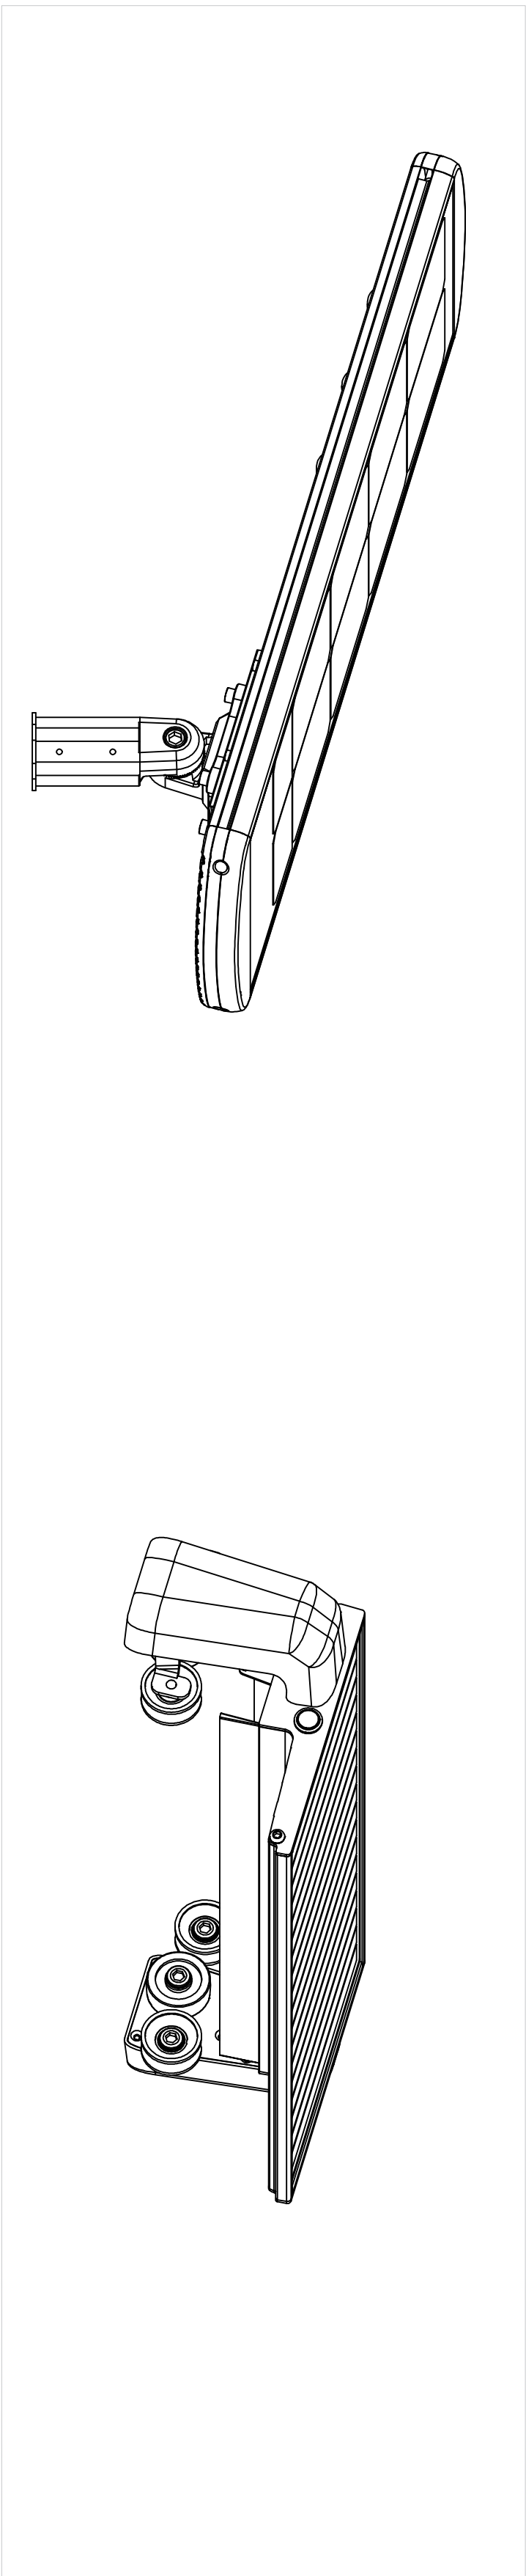


1.After unpacking, the main part of the lamp body and the two parts of the cleaning machine are as shown in the figure above to ensure the overall appearance is complete

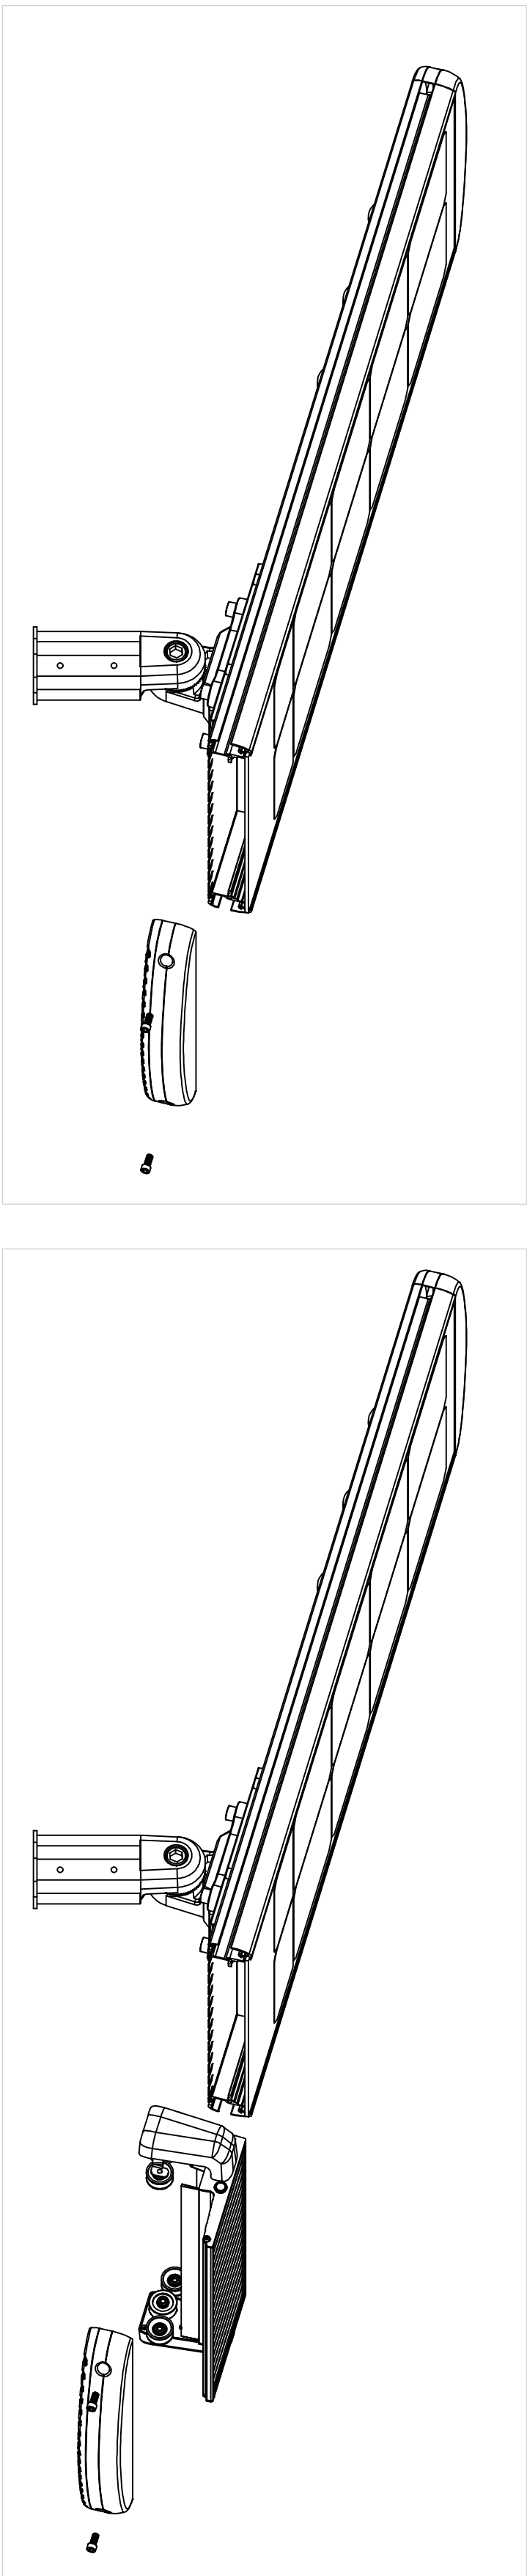

2. Unscrew the two M6 screws with a wrench, open the die-cast lamp head, and assemble the cleaning machine in the order shown in the figure (pay attention to the direction!!)



3. Push the cleaning machine evenly into the corresponding profile track and put on the die-cast lamp head locking screw (pay attention to the direction!!)

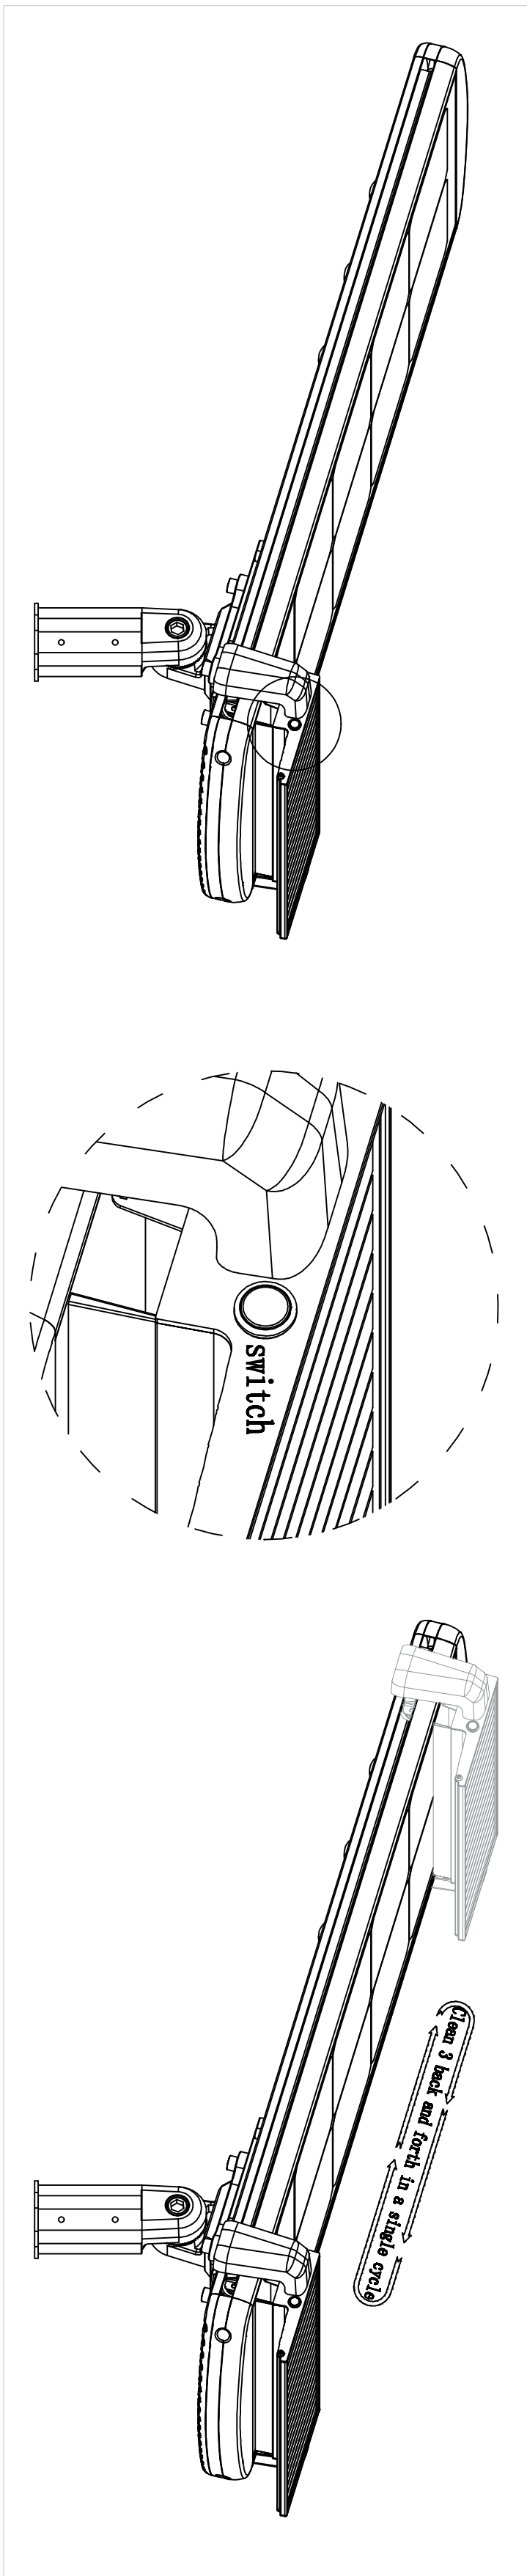

4. Press the switch on the side of the installed cleaning machine to open, and the cleaning control system will enter the intelligent control mode and start working from this moment

Note:
The sweeper should be equipped with our special track profiles
It is strictly forbidden to disassemble the machine without permission